







#### **Fuse Informations**

What are fuses?? They are protectors that prevent damage to electronic and electrical equipment. Fuses allow electric current to pass through them until the amount of current goes over the fuses rating. At the time, the fuse Blows and stop the flow of electric current. Fuses are rated in in amperes, the unit of measure for electric current.

Fast-ACTING / SLOW BLOW. Fast Acting fuses react quickly to current overloads. Slow Blow fuses are less sensitive to start-up surge and protect against long-term overlands

Fuse is a Saftey devices components. Always replace a blown fuse with the same type replace fast acting with fast acting, slow blow with slow blow. Slow Blow fuse are less sensitve to start-up the protection against long-term overloads.

Thera are four basic types of fuse: Slow-Blow/ Time LAG - Dual Element slow blow fuses / Fast-acting / Very fast Acting fuses.

A major type of slow blow fuse is the dual element fuse. This fuse consists of a short circuit strip and a soldered joint, spring connection. During overloads conditions, the soldered joints gets hot enough to melt and the spring shears the junction loose. Under short circuits conduitions the short circuit elements opersates to open the circuit. All dual-Elements fuses are considered to be slow blow, but not all slow blow fuses are dual elements.

Slow-blow fuses are ideal for circuits with a transient surge or power inrush. There circuits include: motors, transformers, incandescant lamps and capacitive loads. This inrush can be 20 times the normal current level. When using fast-acting, single elements type fuses, it is neccessary to rate fuse at 150% to 300% of thre circuits full load curent. With this rating rule inrush may cause nuisance openings.

Slow Blow fuses allow close rating of the fuse without nuisance opening. Typically rate the slow-blow fuses from 125% to 150° of the circuits full load process.

Fast-Acting fuses have no intentional built in slow-blow and are used in circuits without transient inrush Amp.

Very fast-acting fuses often have silver links. Because of the fuses current limiting ability, there fuses are frequently used to protect semiconductor circuits.

The current carrying capacity of a fuse: The nominal value upon which all performance characteristics of a fuse are based.

( Overcurrent) A condition which exits on a electrical circuit when the normals current is exceeded.

Overcurrents take on two separate characteristics - overloads and short circuits.

(Overload) Can be classified as an overcurrent which exceeds the normal full load current of a circuit. Also characteristics of this type of overcurrent is that it does not leave the normal current carrying path of the circuit. That is it flows from the source, through the conductors, through the load, back through the conductors, to the source again.

(Voltage Rating) For general circuit protection, the voltage rating on the fuse should be equal to, or greater than the circuit voltage of the circuit in which the fuse is applied. Exceeding the voltage rating of a fuse impairs ist ability to clear an overload or short circuit safely. Fuse can be used at any voltage below the fuse voltage rating; a 250V fuse can be used in 125V circuits.

EDCON has carefull the right to change specifications on any and all items shown on the webside or any supplements without prior notice providing the performance or appearance will not change the function of the items.

EDCON has carefull prepared the webside specifications contained herein. These specifications are for reference only, any inaccuracies may be due to typographical errors or changes made after the publications on our webside.

Cross Reference charts BUSSMANN / LITTLEFUSE / TELFUSE / BEL FUSE

Testing standards and equipment utilized for UL, CSA, METI, and IEC ... etc. Approvals (Specificy fuse type desired.

EDCON Components are guaranteed to be free form defects in material and workmanship for a reasonable period of time after delivery. Our öiability shall be limited to replacement to defective material only. Either seller or manufacturer shall be liable for any injury, loss or damage, direct or consequential, rising out of the use of or the inability to use the products for his intended use, user assumes all risk and liability whatsoever in connection therewith.

## RADIAL MICRO FUSE FAST ACTING

Part No.: **R23001-1A00** 

Customer:

DRW:	Jason	CHKD	Jules	MATL:	Wu	DATE	06.09.2008
APPD:	Join			FINISH	Shieh	Sheet	1 from 3



Shock:

Vibration:

Salt Spray:

**Insulation Resistance:** 

**Interrrupting Ratings:** 

**Thermal Shock:** 

Materials: Base + Cap:

**Terminations:** 

**Resistance to Solder Heat:** 







### **Technical Specifications**

Operating Temperature: . -55°C to +125°C

MIL-STD-202, Method 213, Test Condition 1

(Shaw toth)

MIL-STD-202, Method 201, (10-55Hz x 3 axis/no load

MIL-STD-202, Method 101, Test Condition B

(48hrs)

MIL-STD-202, Method 101, Test Condition A (After Openeing) 10.000 Ohms minimum

MIL-STD-202, Method 210, Test Condition F

(10sec, at 260°C)

MIL-STD-202, Method 107, Test Condition B

(-65°C to +125°C)

35 amperes or 10 x rated current whichever

is greater at 250V AC/DC

Black Thermoplastic, UL94V-0

Tin plated alloy


Packaging: Bulk 100 / 1000PCS per Bag


Ammo Pack on Tape 1000PCS / BOX

Rated Current	1,5 ln	2,1 ln	2,75 ln		4 In		10 ln
Rateu Current	Min.	Max.	Min.	Max.	Min.	Max.	Max.
1,0A	60 Min.	30 Min.	10sec	3ms	3ms	300ms	20ms


Serie	Ampere Rating (In)	Voltage Rating (V)	Nominal Resistance Cold Ohms	Voltage Drop (mV) MAX.	Nominal Melting I <sup>2</sup> t A <sup>2</sup> sec
R23001	1,0A	250V	0,052	120	0,30

#### **Mechanical Dimension**

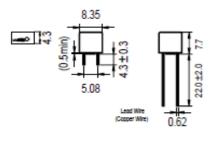

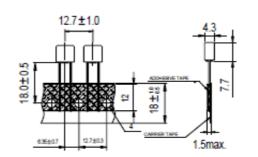

### **PCB Layout**



# RADIAL MICRO FUSE FAST ACTING

Part No.: **R23001-1A00** 

Customer:

DRW:	Jason	CHKD	Jules	MATL:	Wu	DATE	06.09.2008
APPD:	Join			FINISH	Shieh	Sheet	2 from 3











#### **Approvals**

cec	(5)	<b>(</b>	DVE	E	€	KEMA	<u>S</u>
	YES		YES				YES
(H)	[V@I]	PSE	ccc				
YES		YES	YES				

#### **LEAD SOLDER CURVE**

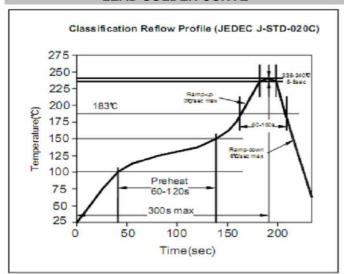

#### **LEAD FREE SOLDER CURVE**

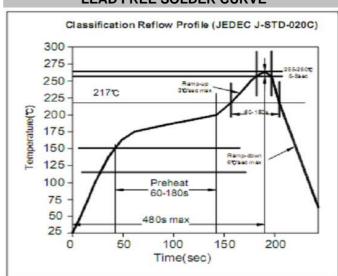

#### **Ordering Information**

Serie	tange Lead	Length ROH	S Packing	
R23001	ΙΔ00	NO R	TD4	

<b>1A00</b> = 1,00A	N0= Long	R= ROHS	TB1=
1A00= 1,00A	Lead	Conform	Tape/Box
	<b>L4</b> = Lead	N= NON	1000PCS
	length ca.	ROHS	BU1= Bulk-
	4,3mm		Ware
		•	100PCS
			BU10= Bulk-
			Ware
			1000PCS

Jules

CHKD

## RADIAL MICRO FUSE FAST ACTING

Part No.: **R23001-1A00** 

Customer:

Wu

Shieh

DATE 06.09.2008 Sheet 3 from 3

MATL:

**FINISH** 

Jason

Join

DRW:

APPD: